

1

Kit 187137

CITROËN Dispatch, 4-dr Van, 16-
CITROËN Jumpy, 4-dr Van, 16-
CITROËN SpaceTourer, 5-dr Bus, 16-
FIAT Scudo, 4-dr Van, 22-
FIAT Ulysse, 5-dr Bus, 22-
OPEL Vivaro, 4-dr Van, 19-
OPEL Zafira Life, 5-dr Bus, 19-

PEUGEOT Expert, 4-dr Van, 16-
PEUGEOT Traveller, 5-dr Bus, 16-
TOYOTA ProAce, 4-dr Van, 16-
TOYOTA ProAce Verso, 5-dr Bus, 16-
VAUXHALL Vivaro, 4-dr Van, 19-
VAUXHALL Vivaro Life, 5-dr Bus, 19-



$10,5 \text{ kg} = \text{Max: } 100 \text{ kg}$
 $21,1 \text{ lbs} \quad / 220 \text{ lbs}$

$14 \text{ kg} = \text{Max: } 150 \text{ kg}$
 $30,8 \text{ lbs} \quad / 330 \text{ lbs}$

Max 130 km/h
80 Mph







80 km/h
50 Mph

ISO 11154-E











THULE.COM

This kit is only for vehicles with fixpoint mounting and without glass roof.


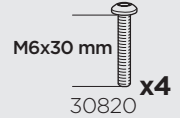


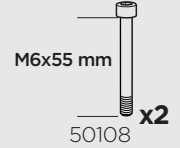




Kit 187010

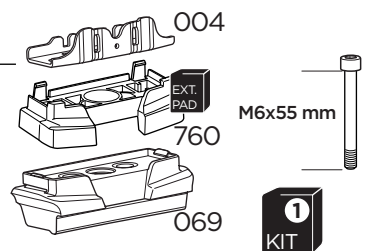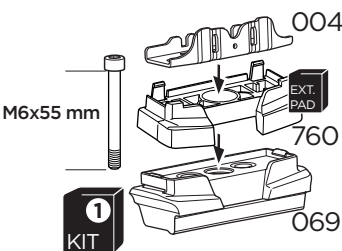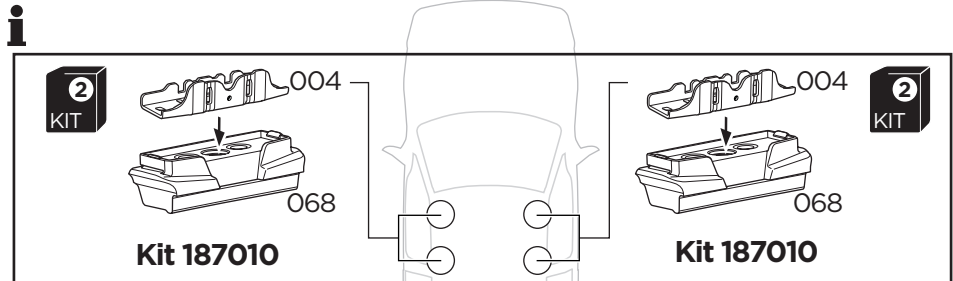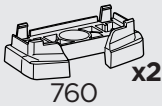


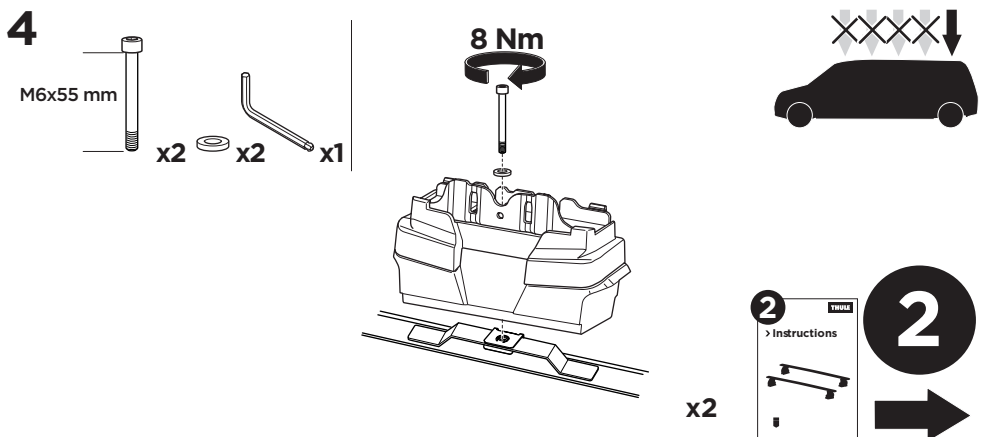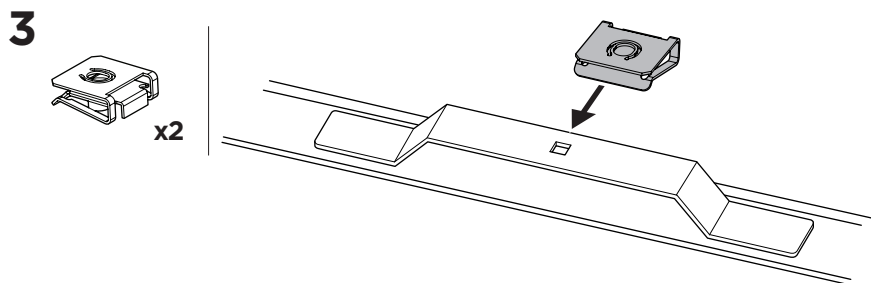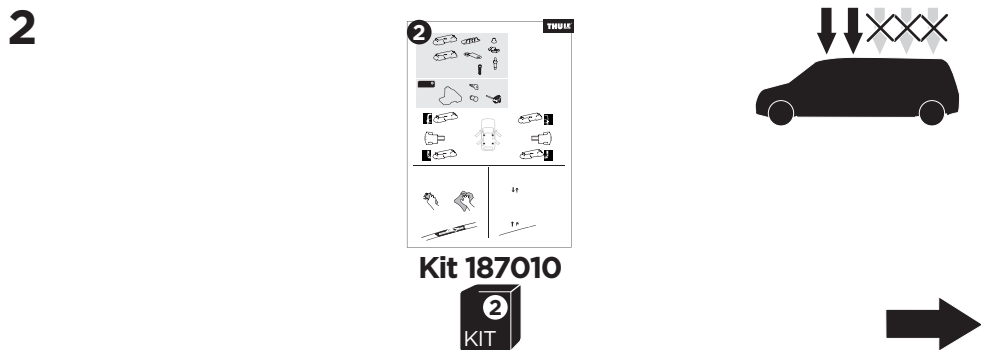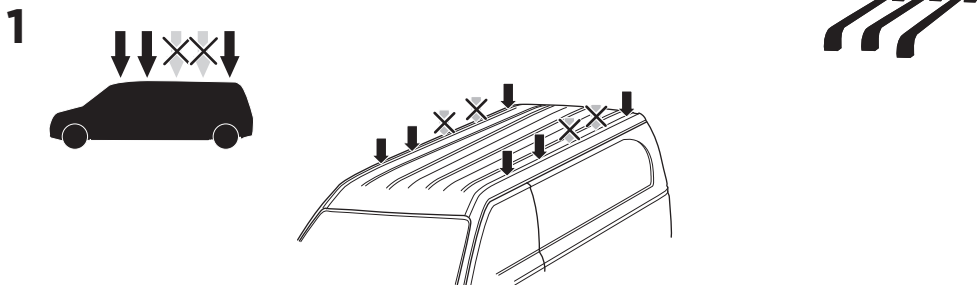



This kit is only for vehicles with fixpoint mounting and without glass roof.

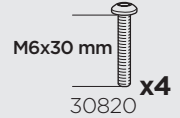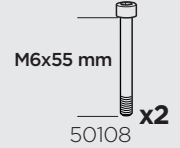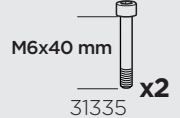



Kit 187010

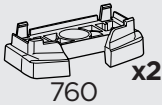


i

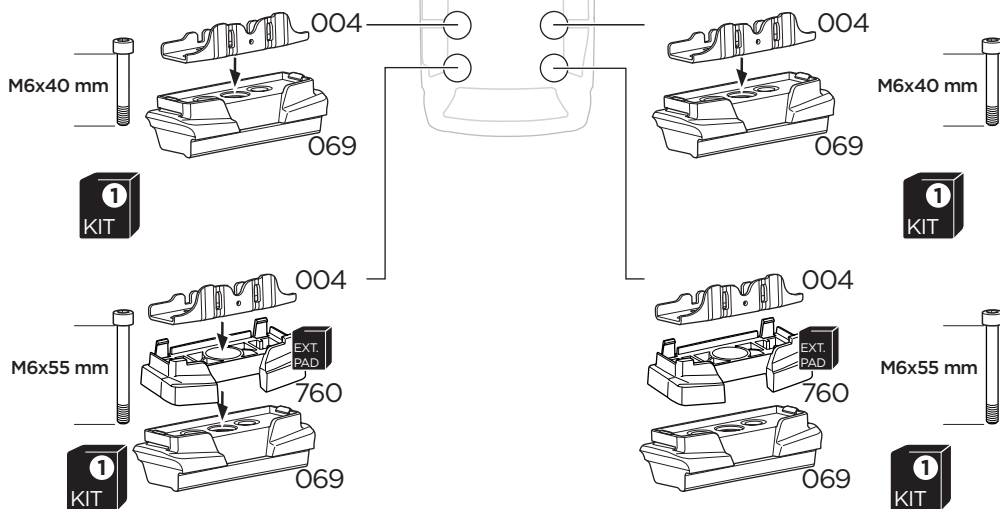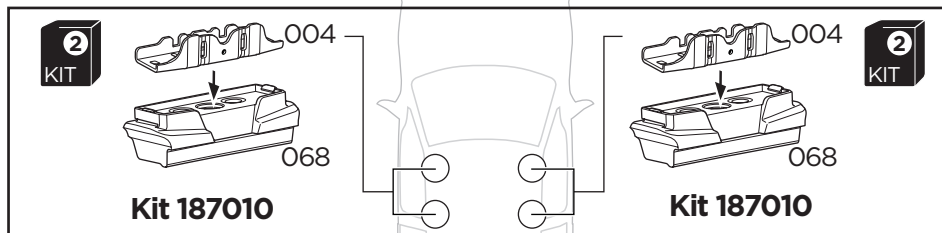


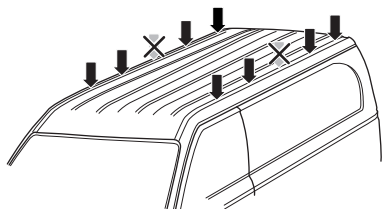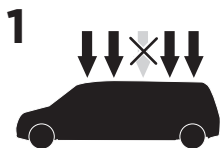



2

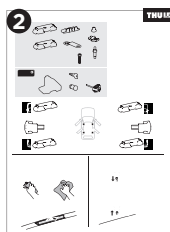




Kit 187010

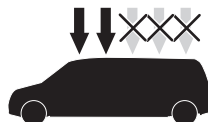

3

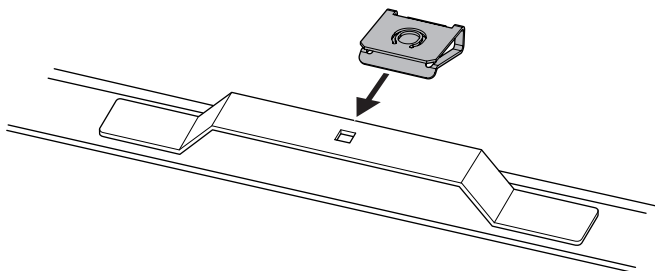


4

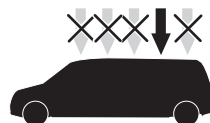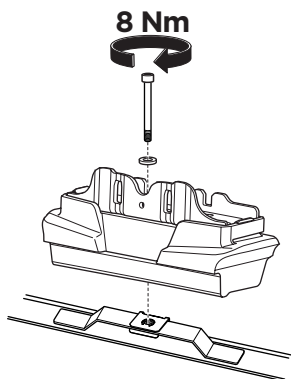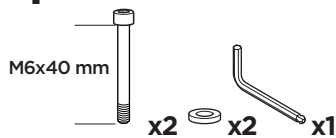


x2

5

M6x55 mm

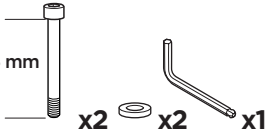

8 Nm

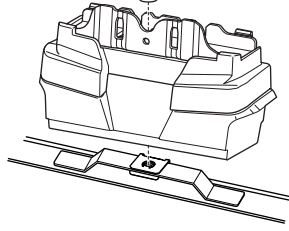


x2

i



A

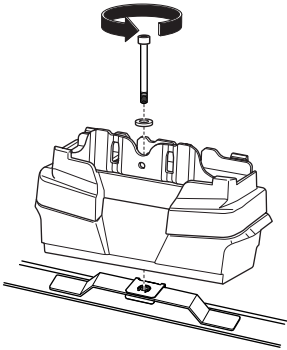

B

